Notes:

Sections marked in red are missing.

TABLE OF CONTENTS

- I. What is CP/M?
- II. Copyright Information
- III. Hardware Requirements
- IV. Bringing CP/M Up
- V. The Digital Research Documentation
- VI. IMSAI CP/M: Major Enhancements and Differences
 - A. Additional Console Commands
 - B. Peripheral Device Support
 - C. CP/M Operation on the IMSAI 8080
 - D. Your Distribution Diskette
 - E. Initializing a Diskette for Use with CP/M

VII. Notes on the Digital Research User Guides

- A. Notes on An Introduction to CP/M Features and Facilities
- B. Notes on ED: A Context Editor for the CP/M System-User Guide
- C. Notes on CP/M Assembler (ASM) User Guide
- D. Notes on CP/M Dynamic Debugging Tool (DDT) User Guide
- E. Notes on CP/M Interface Guide
- F. Notes on CP/M System Alteration Guide

Appendices

- A. Peripheral Port Assignments
- B. "BOOT" Listing
- C. "BIOS" Listing
- D. CP/M Automatic Bootstrap Simulator

Digital Research Chapters

- A. An Introduction to CP/M Features and Facilities
- B. ED: A Context Editor for the CP/M System-User Guide
- C. CP/M Assembler (ASM) User Guide
- D. CP/M Dynamic Debugging Tool (DDT) User Guide
- E. CP/M Interface Guide
- F. CP/M System Alteration Guide

RASIC-E Manual

IMSAI CP/M FLOPPY DISK

OPERATION SYSTEM

VERSION 1.31, REV. 1

1/27/77

Copyright 1976 IMSAI Manufacturing Corporation 14860 Wicks Boulevard San Leandro, California 94577 Made in the U. S. A. All rights reserved worldwide.